

Factory Default



Bluetooth Pairing Instruction

2D Barcode Scanner

User Manual

Pair Instruction

A: Barcode Scanner pair with USB dongle

Step 1, Scan Below Pairing barcode I, barcode II in sequence, and the scanner LED indicator become blue and flashing.

I



II



Step 2, Connect the USB dongle to host device and wait a second, the LED indicator both become blue on barcode scanner and after succeed pair.

B: Barcode scanner pair with bluetooth device

Step 1, Scan Below Pairing barcode I, barcode II in sequence, and the scanner LED indicator become blue and flashing.



Version

I



II



Step 2, Open mobile device bluetooth settings and search for "RB_Scanner_HID" then connect it. When the scanner LED indicator becomes blue, the pairing is complete.

Wired Direct Transmission Mode



Wired Mode



Wireless Mode
(default)

Note: Plug in the charging cable to connect to the computer device, scan this setting code, you can switch to wired transmission mode.

3 Optional Wireless Mode



Normal



Inventory



Automatic
storage(default)

Note:

- 1) Instant upload mode: Scan the barcode to enter the instant upload mode. You will hear a "beep" sound normally. In this mode, the scanned results will be uploaded to the computer instantly.
- 2) Internal storage mode (inventory mode): Scan the barcode to enter the inventory mode. The scanned data will be stored in the internal memory. A "beep" sound will be heard normally. All barcodes stored in this mode can be uploaded by scanning the setting code.
- 3) Automatic storage mode (default mode):

Scan the barcode to enter automatic storage mode, that is, no loss mode. In this mode, when there is a signal (the normal sound is a "beep"), the data will be uploaded to the computer immediately. When the signal is weak or there is no When there is a signal (the normal sound is a "tick"), the scanned data will be stored in the internal memory. When there is a signal, the data will be automatically uploaded to the computer.

Data Upload Instruction in Inventory Mode



Upload all data



Upload new data



Display all data



Display
new data



Data delete

Scan Mode



Manual(default)



Continuous



Auto sensing

Buzzer

 


ON



OFF

Transmit Speed



No Delay(default)



Delay 10ms



Delay 20ms

End Character



CR(default)



CR&LF



TAB



None

Prefix Setting



Add Prefix



Prefix

Eg , Add prefix "A"

Step 1, Scan above code to add" prefix".

Step 2, Scan the numeric code correspond to "A",
the ASCII value of A in Hexadecimal is 4 1,
Refer to Appendix 1 & Appendix 2.

Step 3, Scan "save" code to save(refer to Appendix 1).

Suffix Setting



Add Suffix



Suffix

Note: The method of adding the suffix is the same
as the prefix.

Sleep Time



None



*1Min



2Min



5Min

Keyboard Caps Lock Control



*None



Capitalize



Lower Case



Case Swap

UPC-A to EAN13



Enable



*Disable